


How to Measure a Multipoint Lock

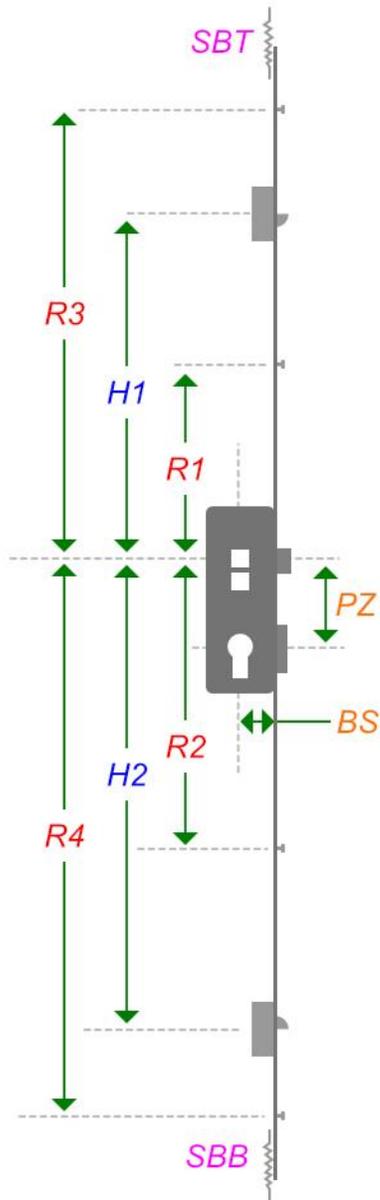

PZ – distance from the center of the spindle to the center of the key hole.

BS – back-set, position from the face plate of the lock to the center of the spindle.

R1, R2 – distance from the center of the spindle to the top and bottom rollers.

H1, H2 – distance from the center of the spindle to the center of the hooks, top and bottom.

R3, R4 – distance from the center of the spindle to the second pair rollers, top and bottom.

Please note, some uPVC locks has an option to add a Shoot-bolt:

- **SBT** – connector for shoot-bolt top
- **SBB** – connector for shoot-bolt bottom

Opening hours:

Mon to Thurs
Friday

8:00am to 5:00pm
8:00am to 4:00pm